


Weathertight door, welding insertion procedure

De Vor Metaalbewerking B.V.

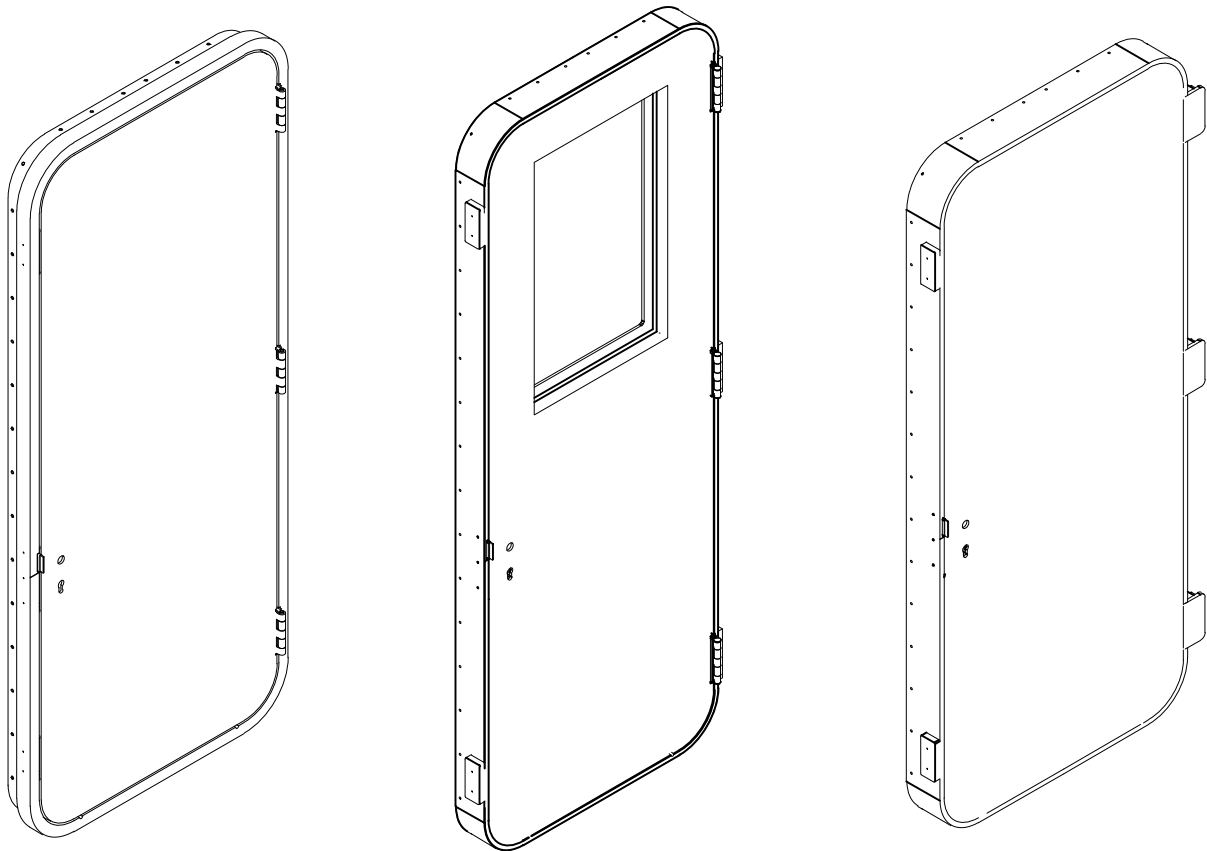

 DE VOR DOORS AND HATCHES	De Vor Metaalbewerking B.V. Handelsweg 5 3481MJ Harmelen	File name: Weerdichte inlasprocedure.dwg
	Tel: +31 (0)348 40 16 36 info@devordoorsandhatches.nl www.devordoorsandhatches.nl	Creation date: 10-8-2020
		Sheet size: A4
		Revision:
Description: Weathertight door, welding insertion procedure		
Number of pages: 10		
EXCLUSIVE COPYRIGHT BY DE VOR METAALBEWERKING B.V. THIS DRAWING MAY NOT BE COPIED WITHOUT APPROVAL FROM DE VOR METAALBEWERKING B.V. OR BE HANDED TO ANY OTHER PARTY		

Weathertight Door

Welding Insertion Procedure

Introduction

This user manual has been prepared with the purpose to have the various doors inserted into the ship's structure in the correct way.

In this manual we describe the various steps of the procedure, the sequence of these steps to be taken and what tolerances are acceptable.

This manual is intended for technical operational or preparatory staff. It is expected that these employees have a basic knowledge of how to read technical drawings.

In order to reach a good end result, the area (plate field) in which the doors will be placed needs to be free of tension. This implicates that no horizontal or vertical strips are welded along the plate cut in order to stretch the area.

Various types of doors

This manual can be used for all kinds of flush doors of De Vor Metaalbewerking. The doors can be opened in a vertical way and can be made of aluminium, steel or stainless steel. Please check the front page for the different types.

Disclaimer

De Vor Metaalbewerking B.V. has exclusive copyright on this document. This document may not be copied without approval from De Vor Metaalbewerking B.V. or be handed to any other party. Users should always follow the prescribed safety rules of the employer. De Vor Metaalbewerking B.V. shall not be liable for any direct or indirect damages through the use of this document. Nor does De Vor Metaalbewerking B.V. make any warranty as to the results obtained from the use of this manual.

In the case of any conflict between the content of this manual and the regulations of the classification provider, the latter shall prevail.


Excluded from the scope of this manual:

- The extent to which the area in which the door is placed is straight /aligned
- The welding procedure specifications, the quality and the finishing of the welds.
- Safety instructions
- Required (measuring) tools

More information about these products are available on our website: www.devordoorsandhatches.nl



CHECKLIST

- ☐ Undamaged package (frame and door assembly)
- ☐ Strips are present
- ☐ Shims are present

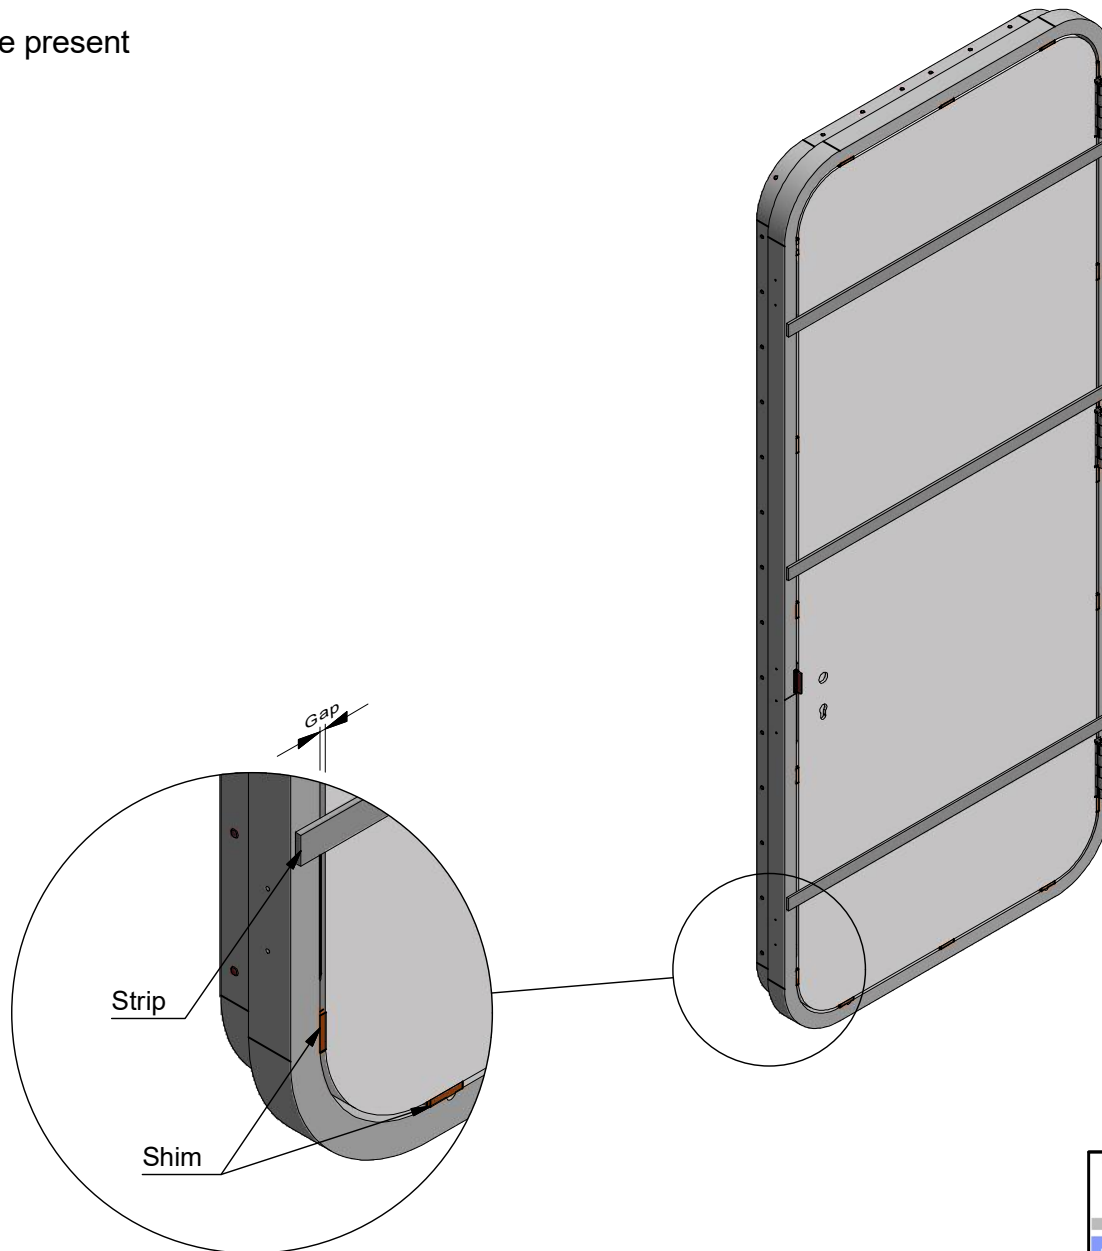



CHECKLIST

- ☐ Determine plate cut position
- ☐ Mark contour (using optional template)
- ☐ Make plate cut

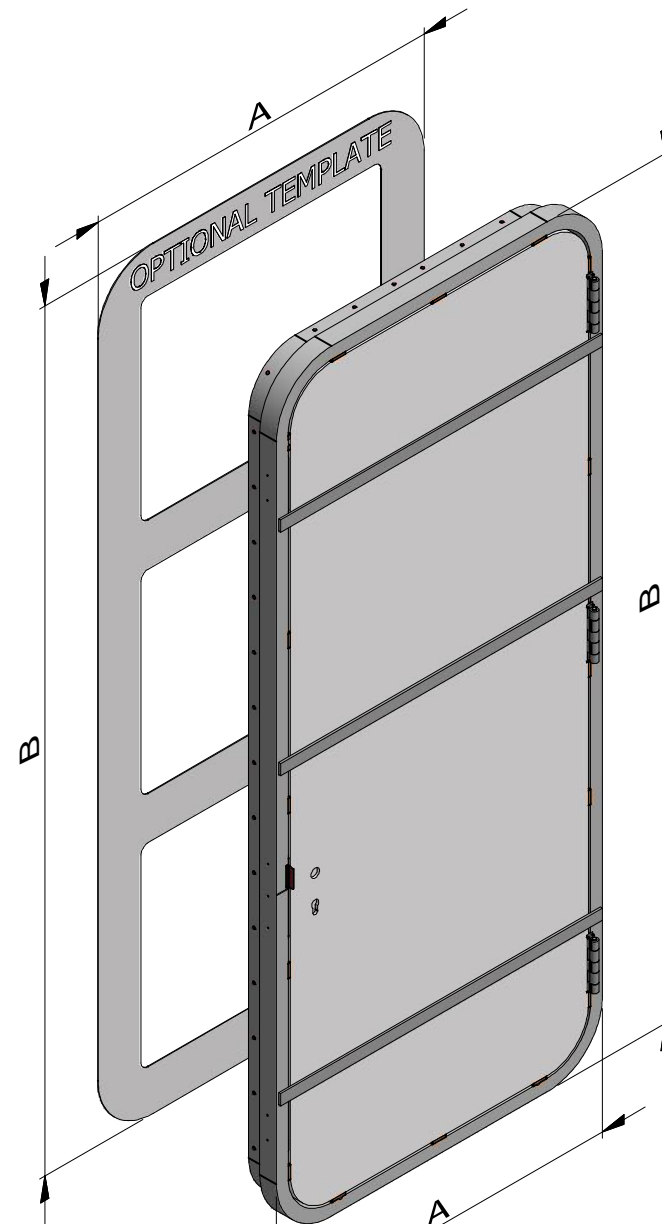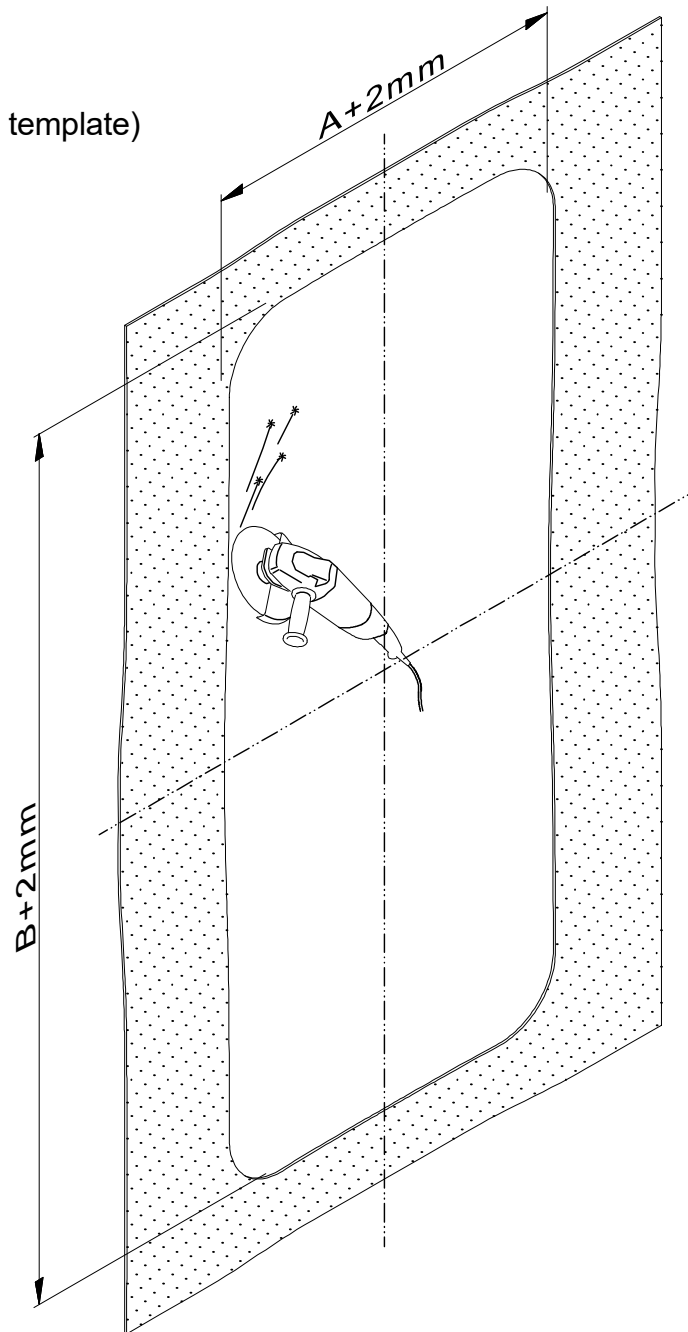




CHECKLIST

- ☐ Place package in plate cut
- ☐ Door is flush with filler line

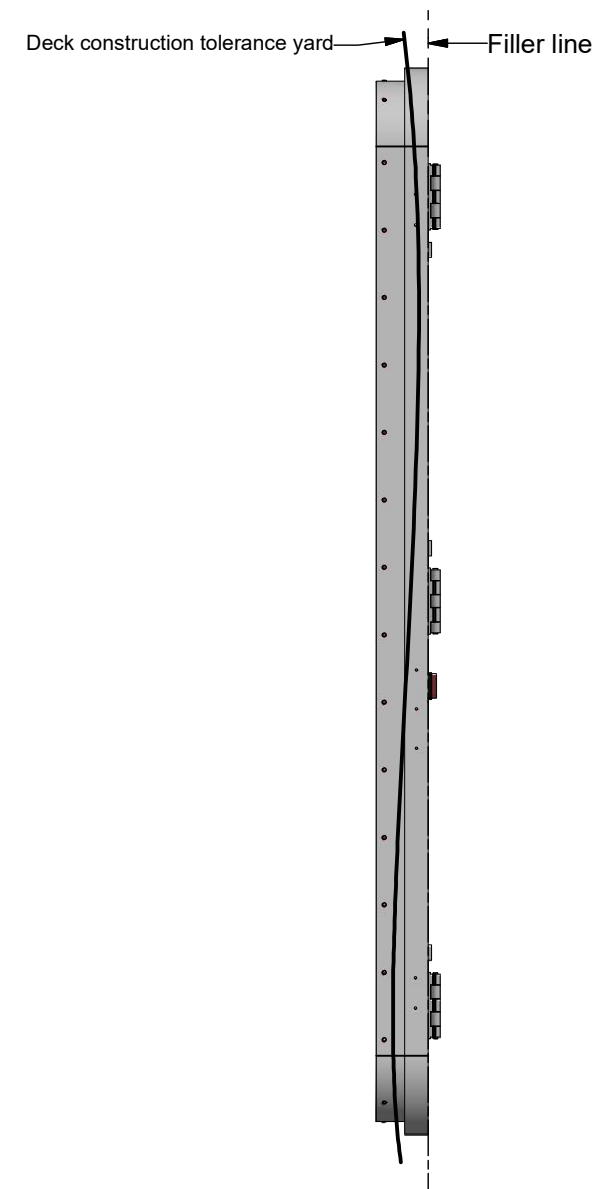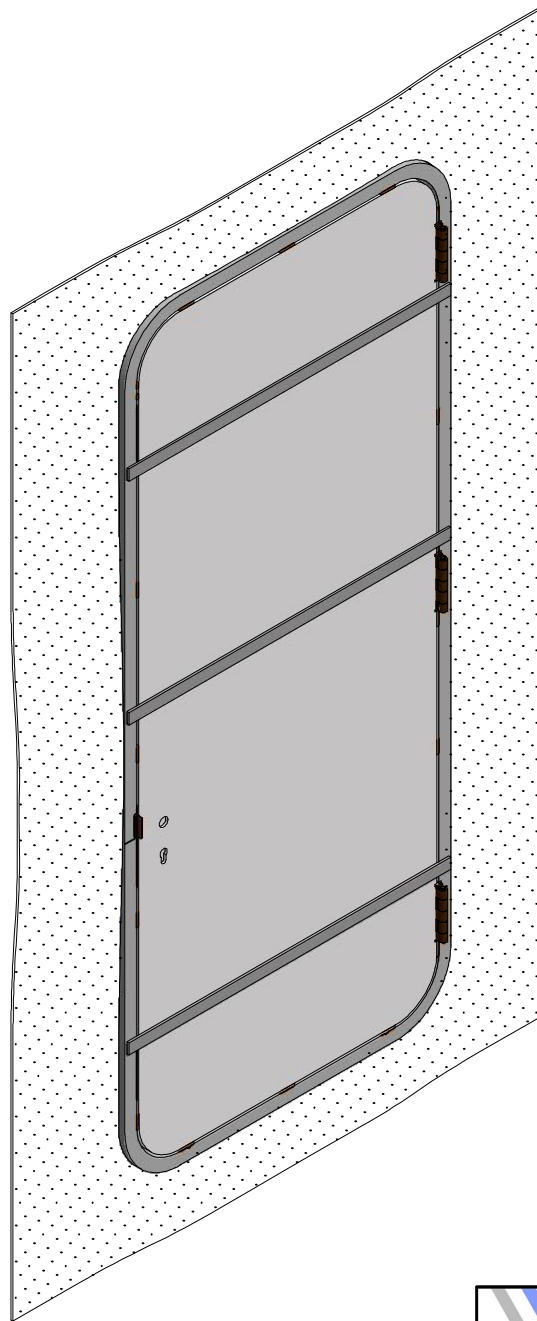


CHECKLIST

- ☐ 1. Tack weld the corners (L=30mm)
- ☐ 2. Tack weld near hinge and strips (L=30mm)
- ☐ 3. Tack weld contour L=30mm pitch is ± 300 mm

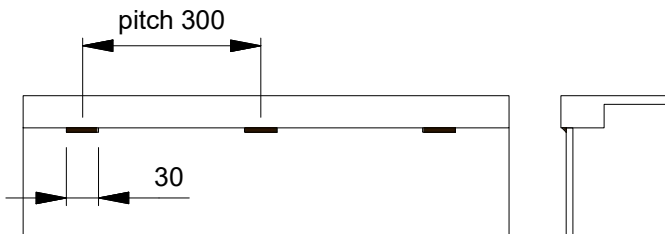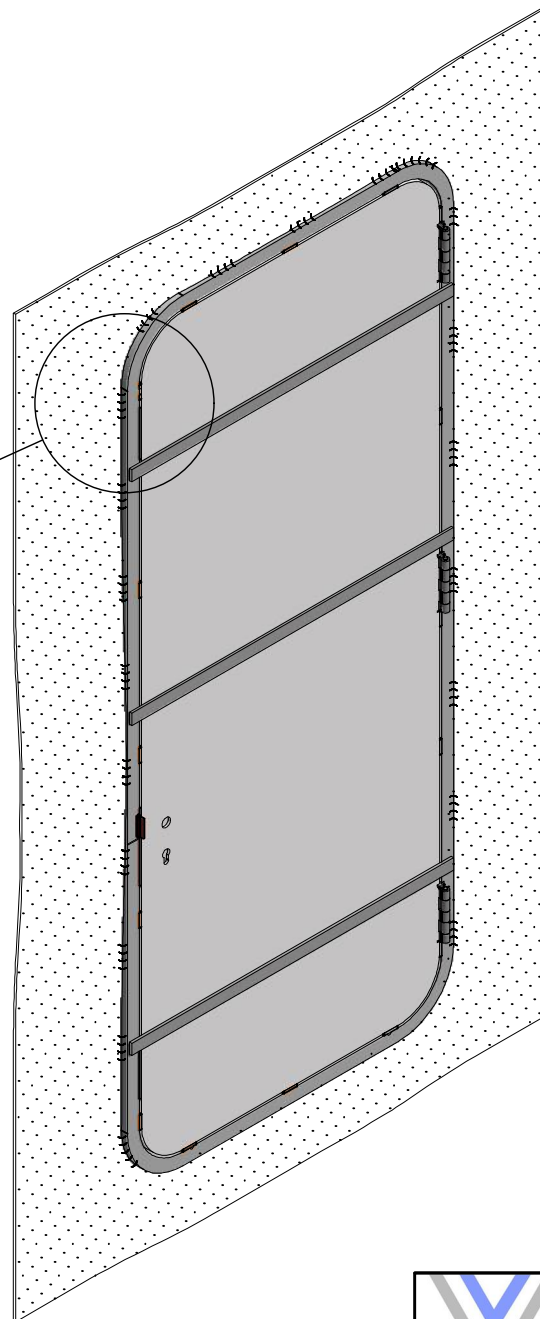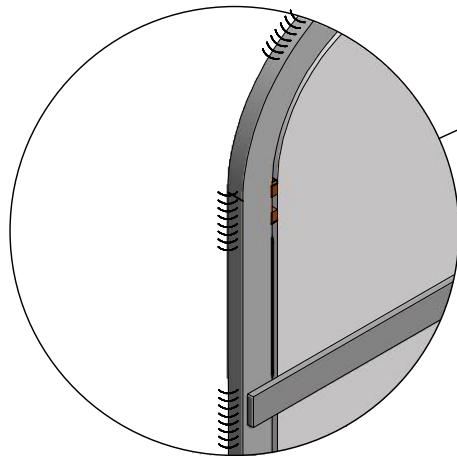




CHECKLIST

- ☐ Remove strips
- ☐ Remove shims

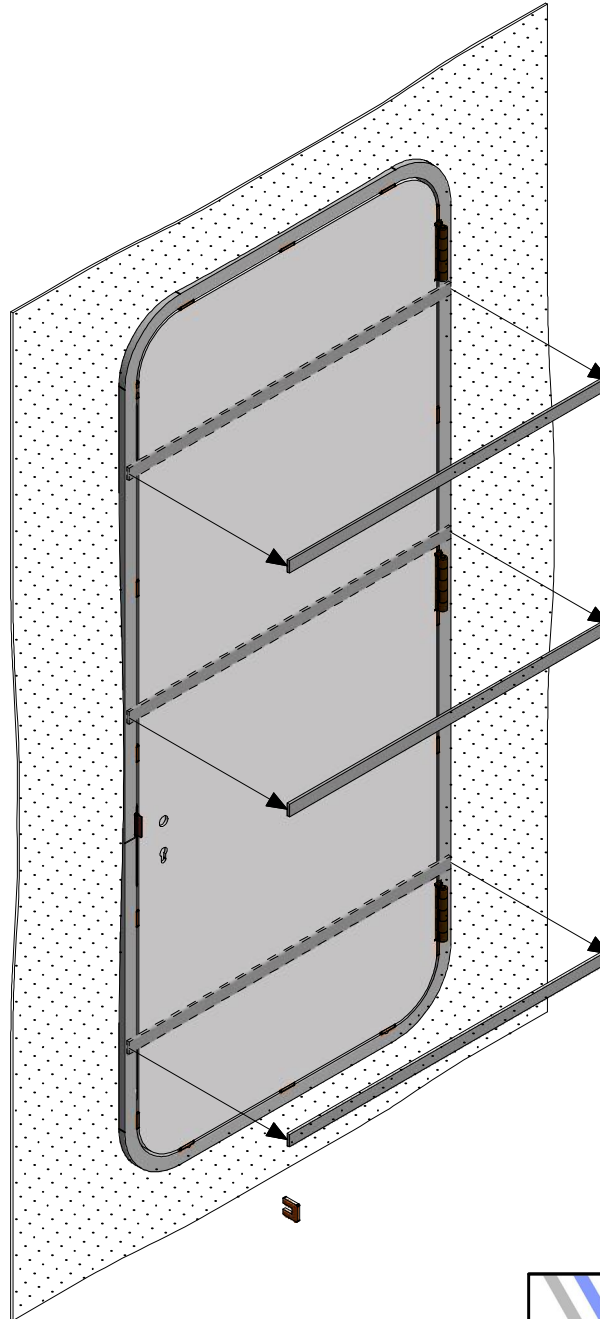



CHECKLIST

- ☐ Frame is placed parallel ($// \leq 2 \text{ mm}$)
- ☐ Door is flush with filler line
- ☐ Frame is straight ($\text{—} \leq 1 \text{ mm/m}$)
- ☐ Frame and door are flush all around

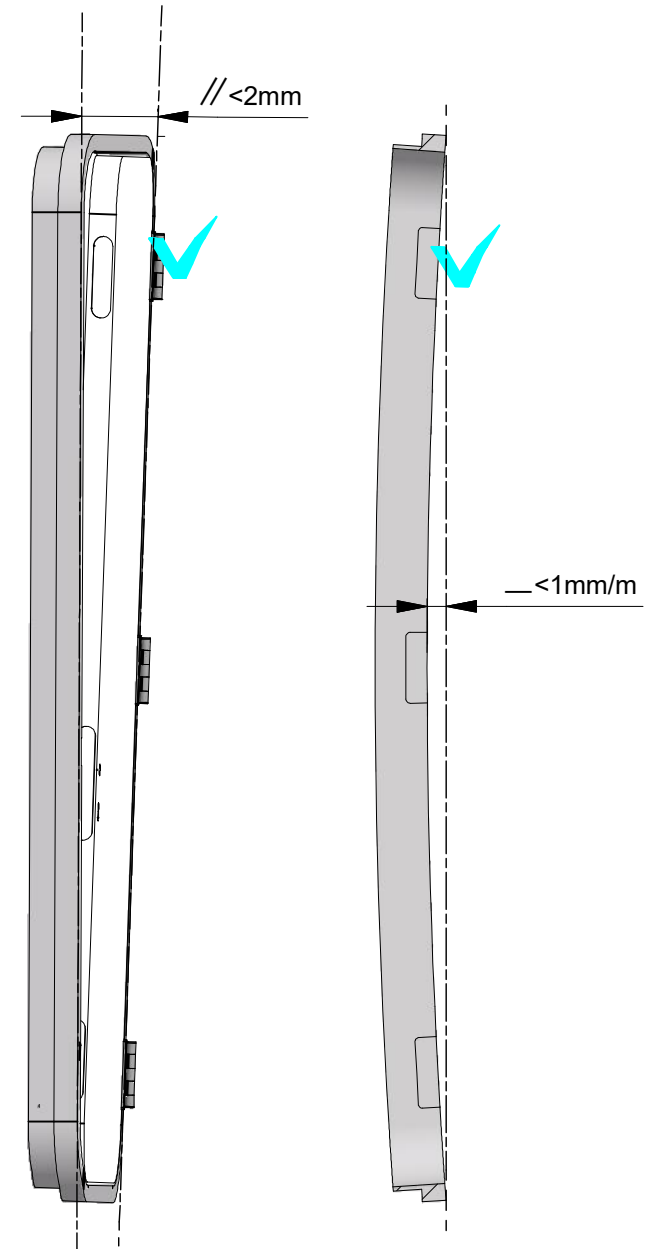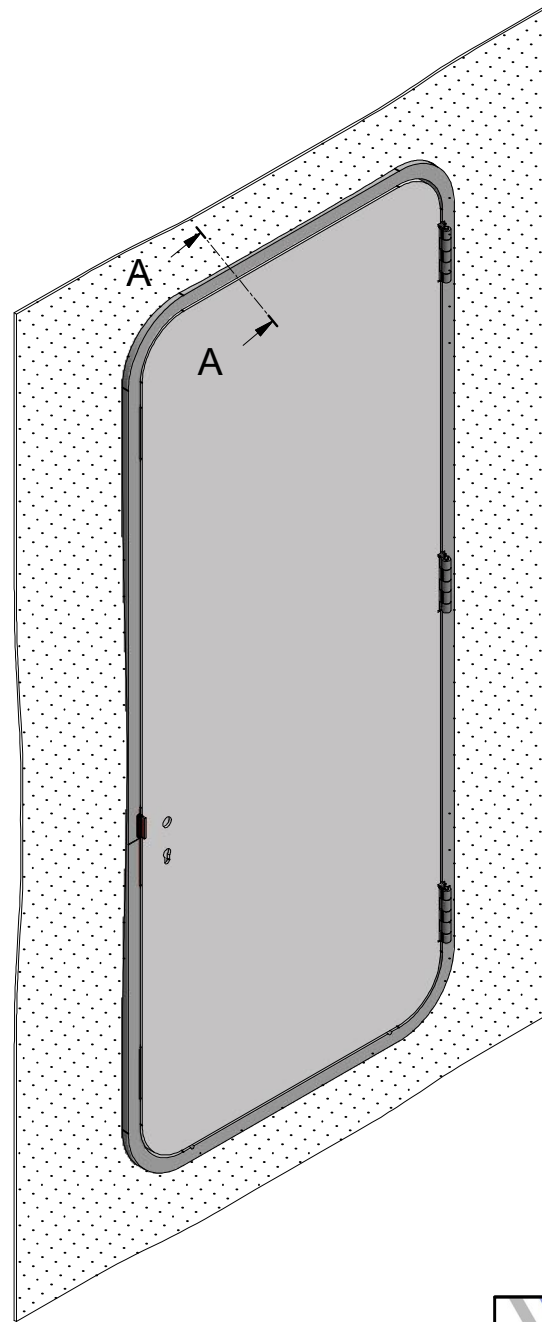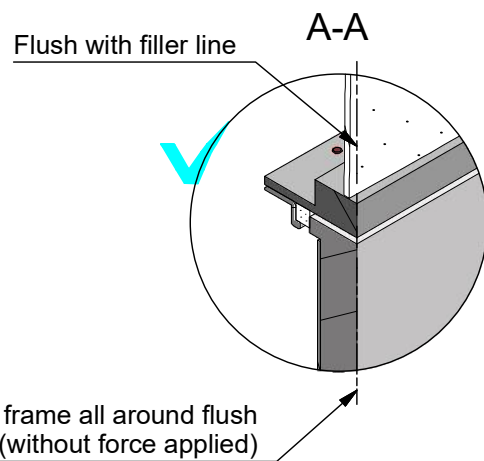


CHECKLIST


- ☐ Tack weld exterior contour L=30mm pitch is ± 150 mm
- ☐ Tack weld interior contour L=30mm pitch is ± 150 mm

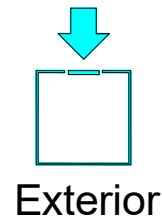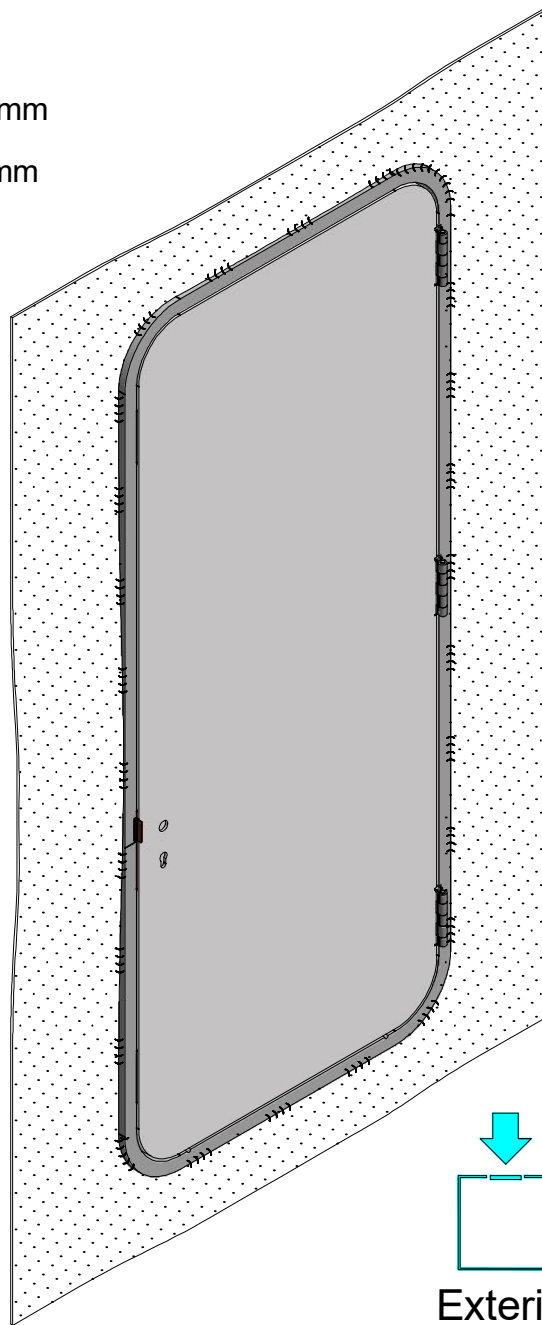

Exterior



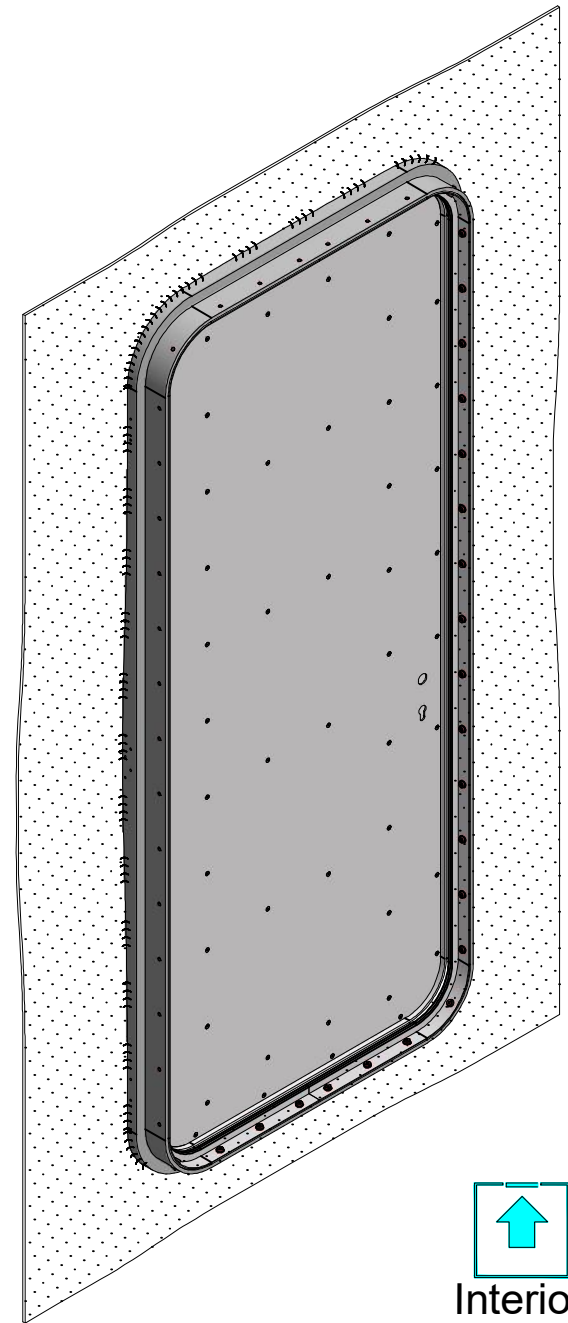


Interior

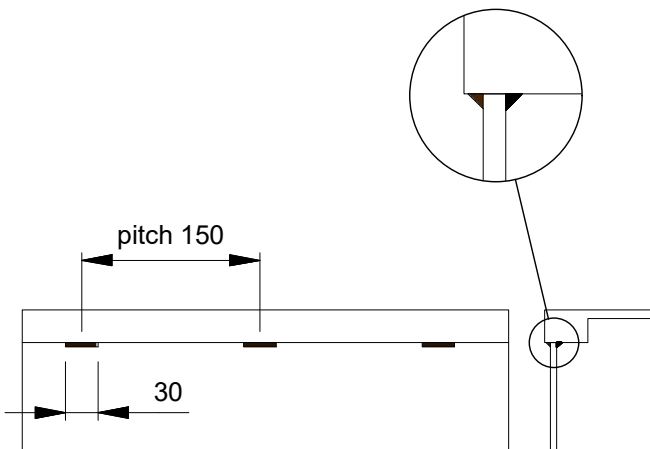


CHECKLIST

- ☐ 1. Weld parameters are according to yard specification
- ☐ 2. Fully weld corners
- ☐ 3. Weld crosswise between tack welds to minimize deformation
- ☐ 4. Interior side completely welded or tack welded according to yard specification

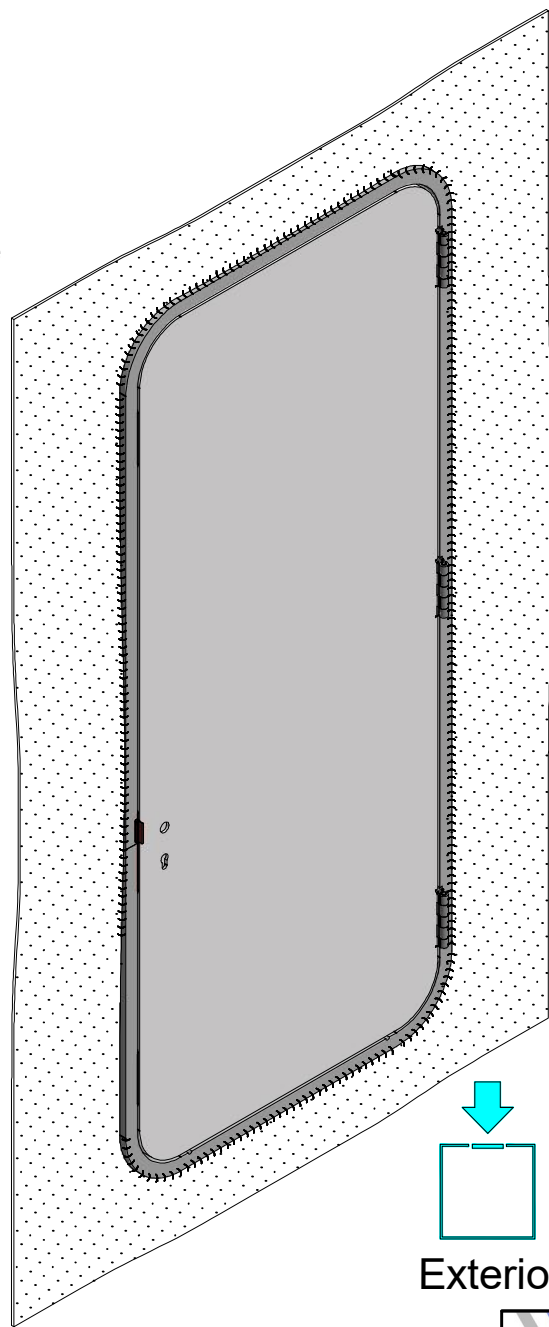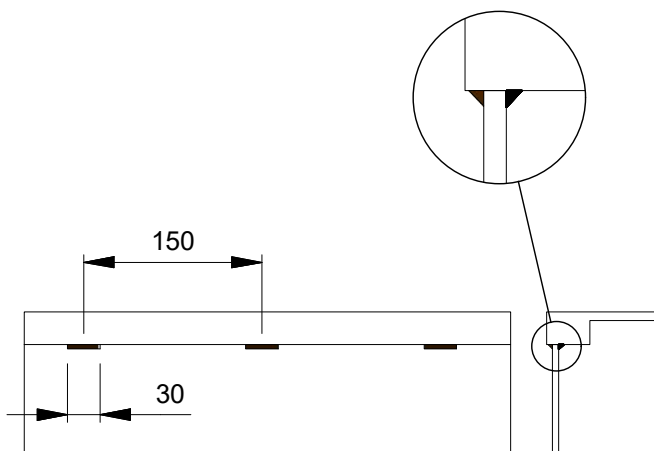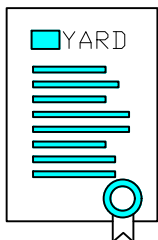

Exterior

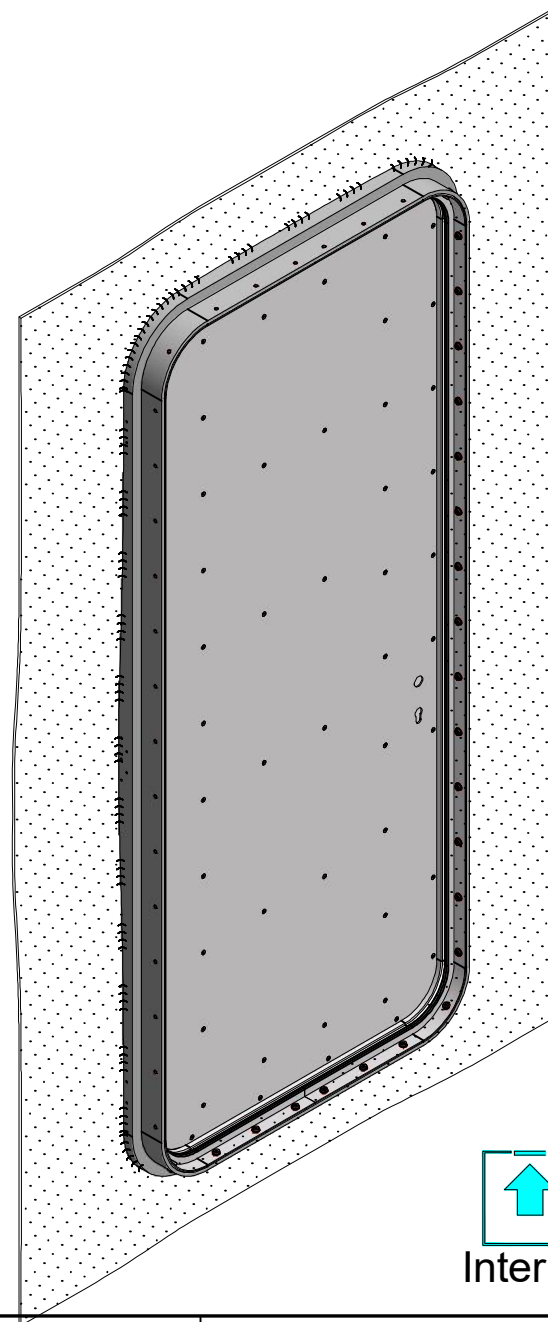

Interior



De Vor Metaalbewerking B.V.
Handelsweg 5
3481MJ Harmelen
Tel: +31 (0)348 40 16 36
info@devorddoorsandhatches.nl
www.devorddoorsandhatches.nl

Weathertight door, welding
insertion procedure

Sheet 9 of 10

CHECKLIST

- ☐ Frame is parallel ($// < 2\text{mm}$)
- ☐ Frame profile is perpendicular to hatch face ($\perp < 1\text{mm}$)
- ☐ Frame is straight ($\text{---} < 1\text{mm/m}$)
- ☐ Hatch and frame are all around flush
- ☐ (Weld) finish quality according to yard specifications

